Guide de l'utilisateur

GPS GS281

Précautions d'usage

- Nous vous remercions pour l'achat de ce produit Danew. Veuillez lire attentivement ce manuel pour vous familiariser avec ses caractéristiques afin de faciliter son utilisation.

- Toutes les informations décrites dans ce manuel étaient exactes au moment de la publication. Cependant, nous améliorons en permanence nos produits par le biais de mise à jour software, il est donc possible que ce manuel ne mentionne pas toutes les fonctions présentes sur votre GPS .

- Pour votre propre sécurité, ne manipulez pas le produit en conduisant. Veuillez vérifier les paramètres de votre trajet avant votre départ. Ce produit est uniquement destiné à l'aide à la conduite, il ne peut donc pas être utilisé pour d'autre besoins tels que la mesure précise de directions, de distances, de lieu et de topographie. Le calcul de la route est seulement une indication. Il est de la responsabilité de l'utilisateur de suivre les panneaux de signalisations ainsi que les règles de circulations en vigueur.

- Lorsque vous quittez votre véhicule, ne laissez pas votre appareil sur le tableau de bord, au risque de l'exposer aux rayons du soleil. La surchauffe de l'appareil peut endommager la batterie et l'écran.

- Les signaux GPS des satellites ne traversant pas les matériaux solides (exception faite du verre) lorsque vous vous trouvez à l'intérieur d'un tunnel ou d'un bâtiment, le positionnement du GPS n'est pas disponible voire imprécis.

- Pour une utilisation en voiture, veuillez placer le GPS de façon à ne pas gêner la vision du conducteur ou le déploiement des airbags. Les dommages accidentels sur le GPS sont de la responsabilité de l'utilisateur.

Sommaire

Chapite 1- Fonctionnalités

1.1 Menu principal ---- 3

1.2 Menu système ---- 3

Chapitre 2 - Batterie

2.1 Statut de la batterie ---- 4

2.2 Recharger ---- 4

Chapitre 3 - Démarrage

3.1 Allumer l'appareil ---- 5

3.2 Mise en veille et extinction ---- 5

Chapitre 4 - Réglages

4.1 Configuration ---- 6

4.2 Eclairage ---- 7

4.3 Gestion de l'énergie ---- 7

Chapitre 5 - Ecran

5. 1 Calilbration de l'écran tactile ---- 8

Chapitre 6 - Fonction USB

6. 1 Branchement en USB ---- 9

Chapitre 7 - Bluetooth

7.1 Bluetooth ---- 10

7.2 Configuration du Bluetooth ---- 10

7.3 Connexion à un téléphone Mobile ---- 11

7.4 Composer un numéro ---- 12

7.4 Afficher le répertoire des appels ---- 13

Guide de dépannage

Dépannage ---- 14

Chapite 1 - Fonctionnalités

1.1 Menu Principal

Le menu principal donne un accès direct aux fonctions principales à l'aide de son interface intuitive.
Vous avez ainsi accès aux différentes fonctions présentes sur votre appareil.

1.2 Menu système

Pour accéder à ce menu, veuillez cliquer sur «Système» pour avoir accès aux options de configurations du GPS.

Chapite 2 - Batterie

2.1 Statut de la batterie

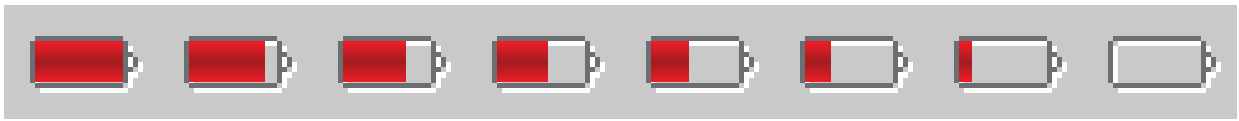

Pleine ⟶ Déchargée

⚠ Lorsque le niveau de charge de la batterie est faible, veuillez brancher votre appareil pour la recharger.

2.2 Recharger

2.2.1 Il est recommandé de charger pendant 8h lors des 3 premiers cycles de charges

2.2.2 En utilisation normale, un temps de recharge de 3h permet de recharger entièrement la batterie.

⚠ Si l'appareil n'est pas utilisé pendant une longue période, il est recommandé d'effectuer une charge complète de la batterie tous les 2 ou 3 mois.

Chapite 3 - Démarrage

3.1 Allumer l'appareil

Lorsque l'appareil est éteint, veuillez maintenir le bouton ON/OFF enfoncé pendant 3 secondes pour allumer votre appareil.

3.2 Mise en veille et extinction

Lorsque l'appareil est sous tension, un appui bref sur le bouton ON/OFF affiche l'écran ci-dessous. 3 options sont proposées :

Pour quitter le mode veille, un appui bref sur le bouton On/Off permetde sortir du mode veille. Le GPS est de nouveau opérationnel.

Lors de la mise en veille, toutes les opérations en cours d'utilisation seront mises en pause.

Chapite 4 - Réglages

4.1 Configuration

Vous pouvez personnaliser votre GPS à partir de ce menu.

Cliquez sur «Système» sur l'écran principal afin d'afficher le menu suivant :

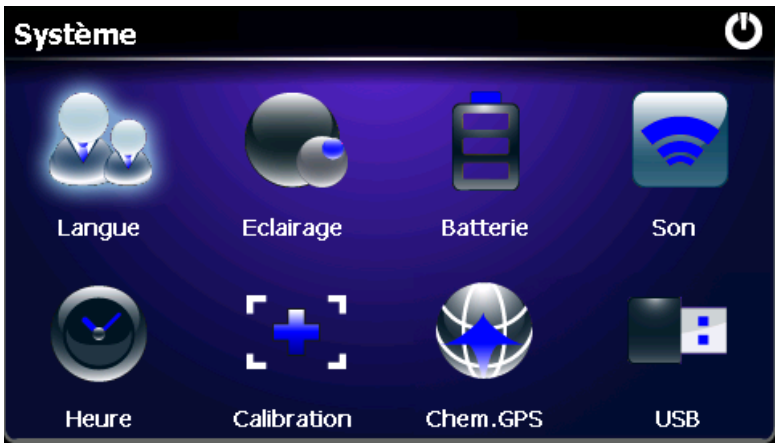

Cliquez sur «Langue» afin d'accéder au menu de configuratin ci-dessous :

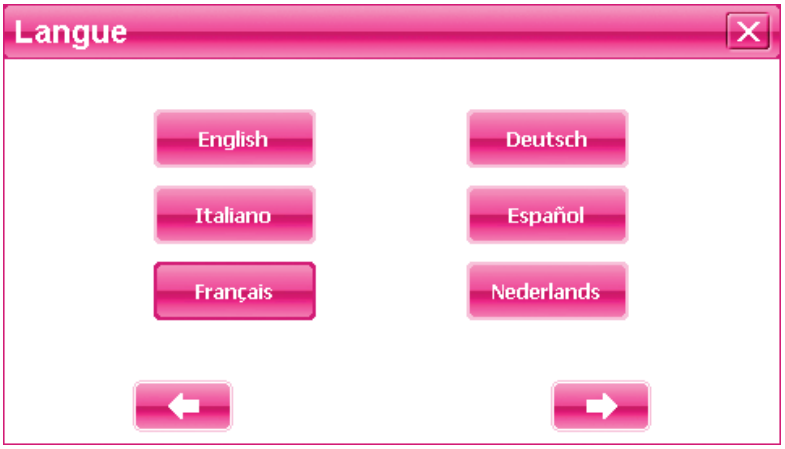

4.2 Eclairage

Vous pouvez ajuster la luminosité de l'écran à l'aide de la barre de contrôle comme illustré ci-dessous.

4.3 Gestion de l'énergie

A partir de ce menu, vous pouvez activer ou désactiver le mode économie d'énergie en fonction de votre utilisation de l'appareil.

Chapitre 5 - Ecran

5.1 Calibration de l'écran tactile

Appuyez sur l'icône "Calibration" pour configurer l'écran tactile.

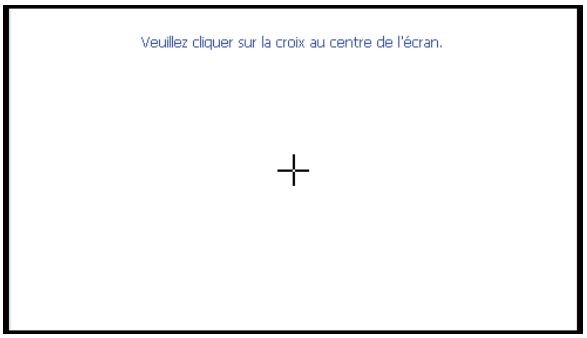

Appuyez 5 fois brièvement sur la croix jusqu'à ce qu'elle disparaisse.
Vous pouvez maintenant appuyer sur l'écran pour quitter la calibration .

Chapitre 6 - USB

6.1 Branchement en USB

Vous pouvez définir à partir de ce menu le comportement de votre GPS lors du branchement à votre ordinateur à l'aide du câble USB.

Clé USB : Sélectionner ce choix pour utiliser le gps comme un disque pour stocker des photos, vidéos ou fichiers audio.

ACTIVESYNC : Sélectionner ce choix pour synchroniser les données contenues dans votre appareil gps avec votre pc ou inversement.

Chapitre 7 - Bluetooth

7.1 Bluetooth

Ce GPS peut être utilisé en mains-libres pour passer ou recevoir un appel téléphonique grâce à la fonction bluetooth qui permet de connecter lb dmp à votre téléphone mobile. Cliquez sur l' icone «Bluetooth» sur l'écran principal pour entrer dans le menu de configuration :

7.2 Configuration du Bluetooth

Lors de la première utilisation, seule l' icone des options est disponible. Le reste des icones sera disponible une fois la configuration terminée.

Le code PIN est le code d'identification nécessaire à la connexion avec votre téléphone portable. Pour vous connecter, vous devez entrer ce code sur votre téléphone afin d'établir le connexion.

Sélectionnez «Activer le Bluetooth». Par défaut le code est 8888

7.3 Connexion à un téléphone Mobile

Une fois la connexion Bluetooth activée. cliquez sur l' icone «Connecter» qui se trouve à côté du bouton «Réglages».
Dans le menu ci-dessous, vous pourrez effectuer la recherche des appareils Bluetooth en cliquant sur le bouton «Recherche».
Si vous avez déjà effectué une recherche les appareils seront affichés dans la liste.
Pour connecter votre mobile, sélectionnez le dans la liste et clliquez sur «Connecter».
Ensuite veuillez entrer le code PIN 8888 sur votre mobile afin de terminer l'association Bluetooth avec le GPS.

«Recherche» : Cliquez pour lancer la recherche des appareils Bluetooth

«Connecter/Déconnecter» : Cliquez pour connecter ou déconnecter votre appareil

«Supprimer» : Cliquez pour supprimer les appareils dans la liste

«Découplage» : Cliquez pour découpler le GPS du l'appareils Bluetooth

Note : Appuyez sur «déconnecter» puis sur «Découplage» avant de lancer une nouvelle recherche.

Cliquez sur pour revenir au menu précédent.
Toutes les fonctions Bluetooth sont désormais activées comme sur l'image ci-dessous.

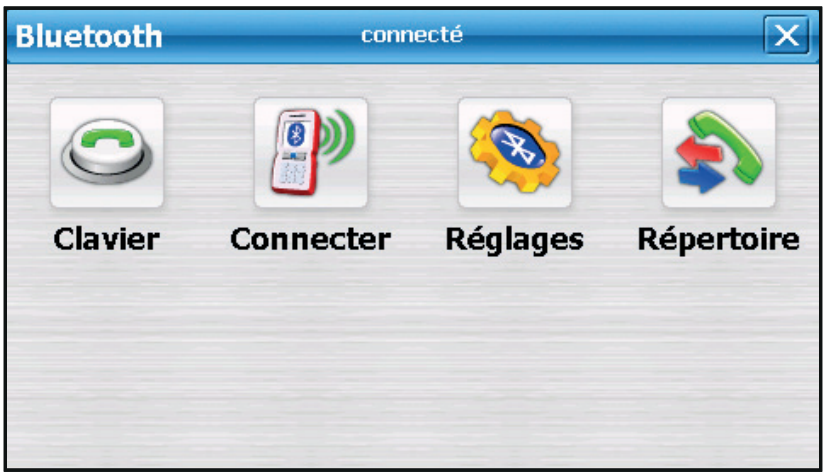

7.4 Composer un numéro

Cliquez sur le bouton «Clavier» du menu Bluetooth pour afficher le clavier
Veuillez maintenant composer le numéro de votre correspondant puis appuyez sur le bouton «appeler» (Touche verte).

Pendant l'appel, l'écran ci-dessous est affiché.

Cliquez "Appel DTMF" pour réafficher le clavier.
Cliquez sur "Raccrocher" pour terminer votre appel et raccorcher votre mobile.

7.5 Afficher le répertoire des appels

Sur l'interface Bluetooth cliquez sur le bouton «Répertoire».
Sur le nouvel écran cliquez sur les boutons situés à gauche pour afficher les appels manqués, les appels reçus et les appels émis.

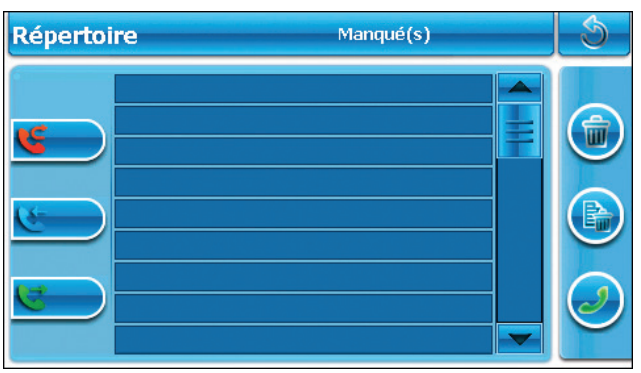

Guide de dépannage

No.	Pannes	Causes	Solutions
1	Ne s'allume pas	Batterie déchargée.	Veuillez brancher votre appareil à une source d'énergie.
2	Ecran figé	Le logiciel ne répond plus.	Veuillez retirer le câble USB qui relie votre ordinateur à votre appareil puis rebranchez
		Batterie faible.	Appuyez sur le bouton ON/OFF pendant 5 sec.
			Appuyez sur le bouton RESET afin de redémarrer l'appareil.
3	Aucun son	Le volume est au minimum	Veuillez augmenter le volume sonore dans les options de l'appareil .
4	Impossible de recharger	L'appareil n'est pas alimenté.	Veuillez vérifier les branchements entre le GPS et la source d'alimentation en énergie.
			Démarrer votre véhicule .
		Le cordon d'alimentation est H.S.	La batterie est endommagée .
			Veuillez contacter votre revendeur ou le service technique afin d'obtenir une assistance.

Quick start guide

GPS GS281

Please read this manual before you start using this device

- Thanks for purchasing our product. Please read this manual carefully before starting to use this device. When you use this device, you are supposed to learn well of this product.
- The information in this manual has been verified for its accuracy. But no liability will be applied for the correctness of mapping data of navigation, technical and/or editorial interpretation or illustration, or the printing and translation of this manual, nor liable for any consequence or incidental damages caused by using this manual.
- This device is a complicated technical product consisting of OS and third party software. The manufacturer has paid sufficient attention to and fulfill its duty in its hardware manufacture processing and in development and/or application of the software so as to ensure the device work properly. If there is any malfunction or defective of the device, the manufacturer will provide a warranty for the congenital quality problem, but not covering for any loss or damage of property, or any consequence caused by or related to using this device.
- The navigation software and mapping data is provided by a third party. Its copyright is protected by laws. A User can only use on this device, any copying or application of the software for other purpose is not allowed.
- No explicit and/or implicit guarantee or assurance will be applicable for the validity, integrity, correctness, accuracy of mapping data for navigation used on this device, nor liability for any loss, damage, and/or any consequence caused by or related to defective mapping data or software used on this device.
- The copyright of this manual is owned by the company and protected by laws. Any copy or translation of whole or part of its content, including words, figures, signs, phonetic index, etc., is only allowed for the individual customer's reference, but not for public circulation, or other legal and/or commercial purpose. The company reserves the right for final interpretation of this manual.

Catalog

Function Description

- Illustrations on screen display---------- 3

Battery

- Battery Status Icon---------- 4
- Charging---------- 4

Power On/OFF the device

- Power On the device---------- 5
- Sleeping mode---------- 5
- Power Off---------- 5

Function & Operation

- System Setting---------- 6
  - Language Setting---------- 6
  - Backlight setting---------- 7
  - Power Management---------- 7
  - Coordinates Calibration---------- 8
  - USB---------- 9
- Bluetooth Function ----------10

Services

- Troubleshooting----------14

Function Description

Illustrations on screen display:

System UI

On this menu click on «Settings» button to enter the function settings page.
Click on «GPS» to launch the navigation software.
Click on «Multimedia» to enter on the multimedia menu .

Secondary UI

In this interface, click the icons on the screen to enter the corresponding functions

Battery

Battery Status Icon:

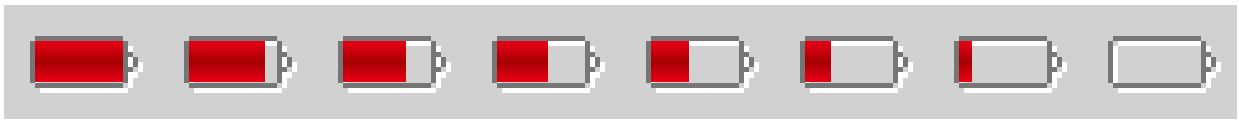

Full ⟶ Drained

When the battery is at low power level, please charge it immediately to ensure the device work normally

Charging:

Warnings for charging:

1. A new battery may be empty and not charged before you get the device.
2. To achieve the best performance of the battery, it is better to charge it up to 8 hours in the first three times, but not over 16 hours.
3. In normal charging with DC charger, please make sure to charge it for 2 – 2.5 hours to get it fully charged.

- **A new battery will reach its best performance after a number cycles of charging and discharging.**
- **If the device is not used for long time, it is better to charge it to full capacity every 2 or 3 months during storage.**
- **If not using the device for a long time, it is wise to take out the battery.**

Power ON/OFF the device

Power On the device

In power off status, slide the power switch to "ON" position to turn on the device, then the OSD will be displayed on screen.

Sleeping & Power –off

In power-on mode, press the power button on the device for 3-5 seconds then the sleeping mode or confirmation for power-off screen will display as follows:

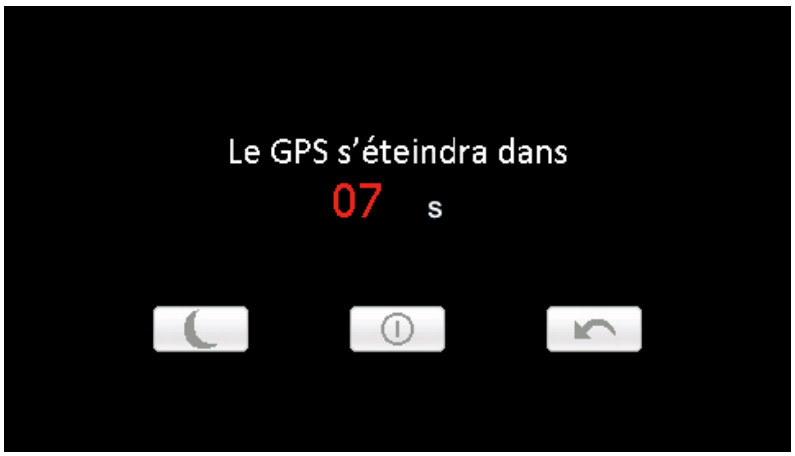

In this UI click the button will be in sleeping mode, click the button will power off ; click the button to exit the UI and back to normal operation.

Waking -up from the sleeping

When in sleeping mode, a short press on the power-on button of the device will wake up the system.

When in sleeping mode, all the procedure in operation will pause but will back to normal status after waking up.

Function & Operation

System Setting

This is for system setting to change default setting of the system to your personal preference.

- **Operation:**

On system main menu, click

icon to enter into system setting. Screen display is shown as the illustration below:

In system setting, there 8 items for setting, click directly each item to change setting for it. Details will be described below.

- **Language Setting**

This is for setting of system language, screen display is shown as the illustration below:

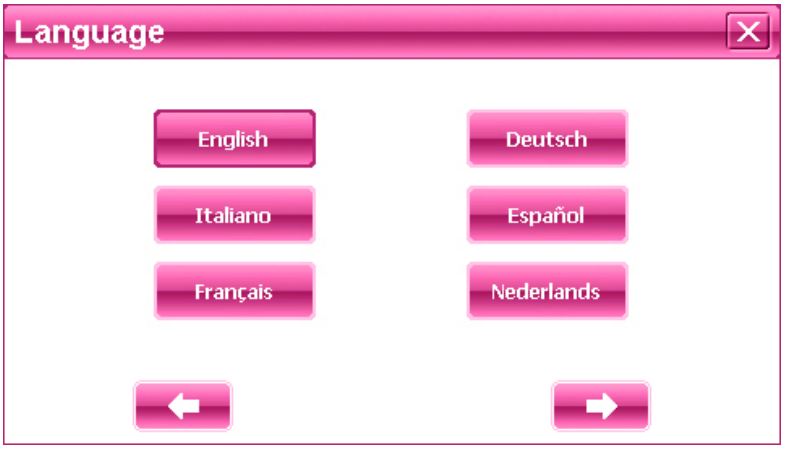

Click the icons of the corresponding language in this interface or choose the interface project, the system will save the setup automatically when the setup is closed, and return to the previous menu. (The system will be required to restart after the interface project is changed.)

Function & Operation

⦿ Backlight setting

This is for changing backlight brightness of the device screen display, and time to start screen saver when no operation on the device. Screen display is shown as the illustration below:

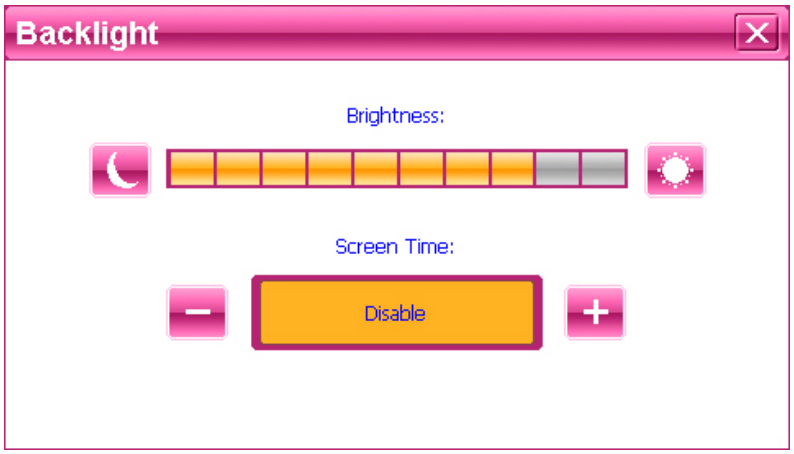

Then, drag the slide block to set. Select No Screen Saver, then the screen saver will be disabled. After setting, close the current window to save.

⦿ Power Management

This is for setting auto power off and/or power saving mode, and time to start power off and/or power saving when no operation on the device.

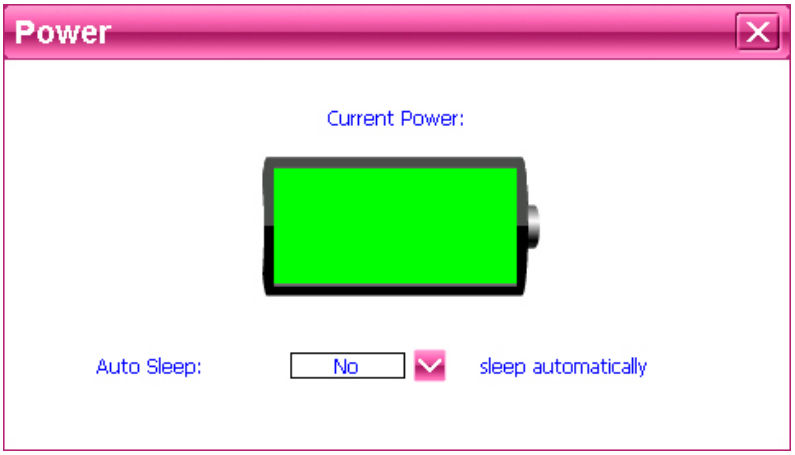

In drag menu to select time, select “No” for disabling this feature. After setting, close the current window to save.

Function & Operation

⦿ Coordinates Calibration

This is for calibrating the stylus coordinates on touch screen. After entering into this UI, screen display is shown as the illustration below:

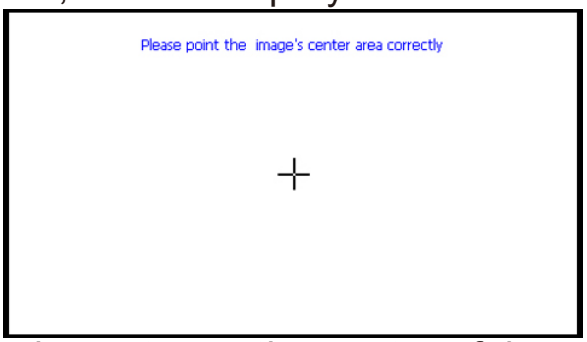

On this UI, use stylus to tap at the center of the cross, then tap on other crosses which will move after each tapping until finish and “Touch Screen Calibration Completed” is shown.

Function & Operation

⊙ USB

This is to set the mode when the USB interface of the device is connected to the computer, in which “MASS STORAGE” is to set the device as a memory, and “ACTIVESYNC” is to use the device for program debug. Pictures are shown as below:

Click the desired connection mode and close the window to save the chosen mode.

Function & Operation

Bluetooth Function

The Bluetooth function is used for communication purpose. After the device is connected to a mobile phone with Bluetooth capability, you can operate the mobile phone functions on this system. He can dial or receive a call, view the call record of the mobile phone or perform other functions. Click the Bluetooth icon on the main interface and enter the following interface:

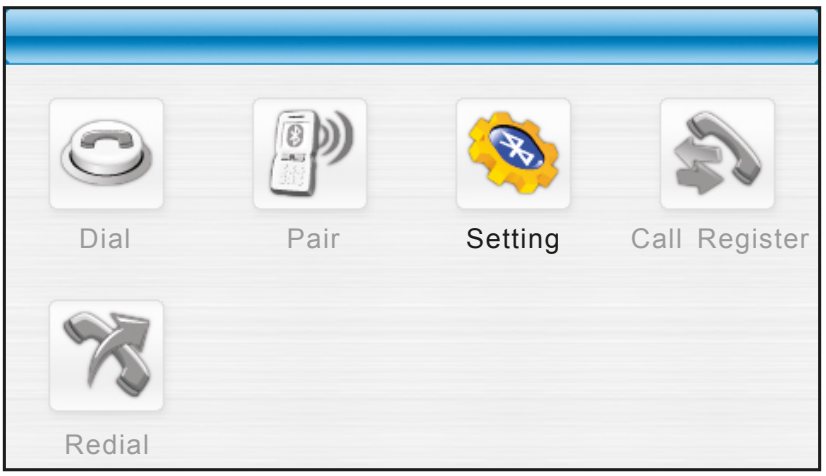

⦿ Enabling Bluetooth Function

In the first use of the Bluetooth function, you will see the interface shown above. Only Bluetooth Setting is available. Other functions are all unavailable in the gray-out state. At this time, enable the Bluetooth function. Click Bluetooth Setting to enter the setting interface, as shown in the following diagram:

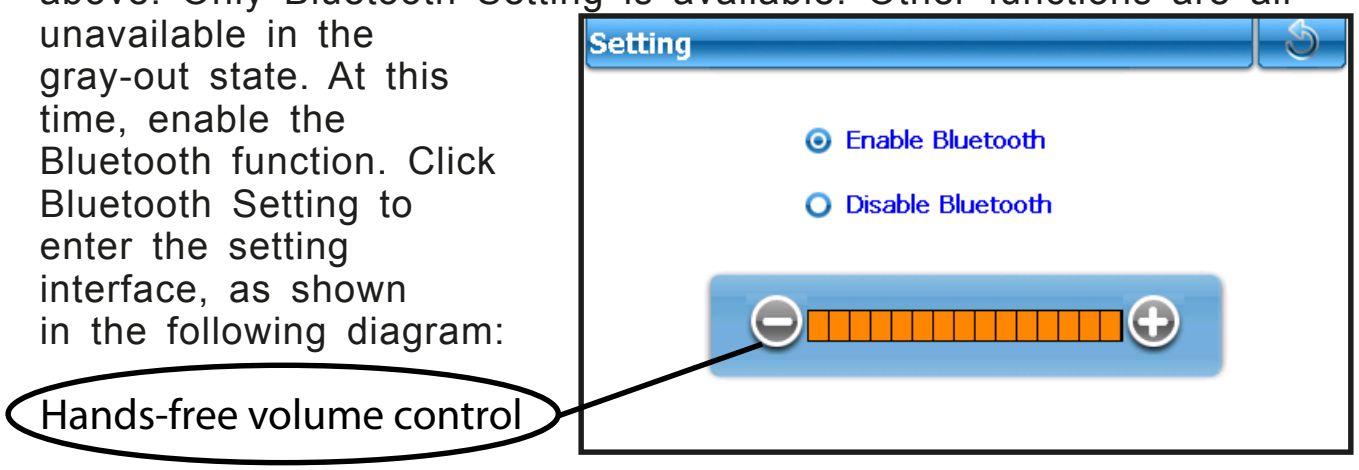

Select by ticking the check box ahead of the Enable Bluetooth Function to enable the function. The return to the upper-level menu please click on this icon :

At this time, as the mobile phone is not connected, other mobile phone functions are unavailable.

Function & Operation

○ Connecting Mobile Phone

After the Bluetooth function is enabled, on the Bluetooth function interface, click the Pair icon to enter the Bluetooth equipment matching function, as shown in the following diagram:

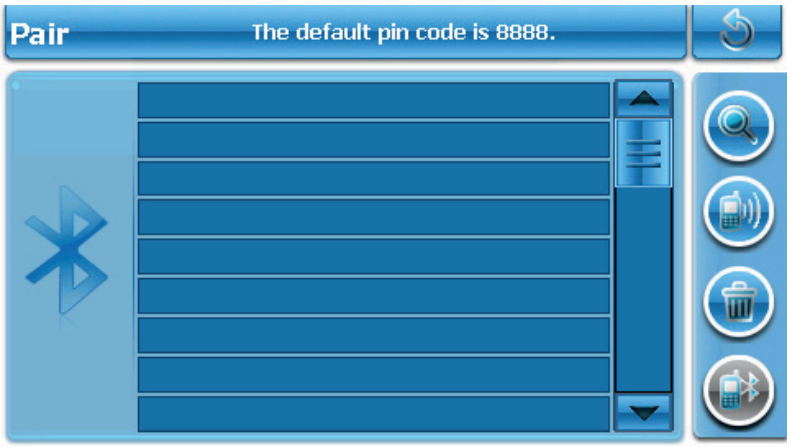

«Scan» : Click here to scan available bluetooth device

«Connect /Disconnect » : Click here to connect/disconnect the selected device

«Delete» : Click here to delete the selected device

«Unpair» : Click here to unpair the selected device

If connection has been established in the past, the interface will list all devices that have been connected in the past.

If there is no device on the list please click on the «Scan» button to search your bluetooth mobile device.

Select a device from the list and click on «Connect» button . After check your bluetooth device and enter the PIN code 8888 and wait for the connection.

Note : Press on the «disconnect» button and after press on the «Unpair» button before searching a new device

Function & Operation

At this moment, click OK to return to the upper-level interface. You'll see that all functions are available now, as shown in the following diagram:

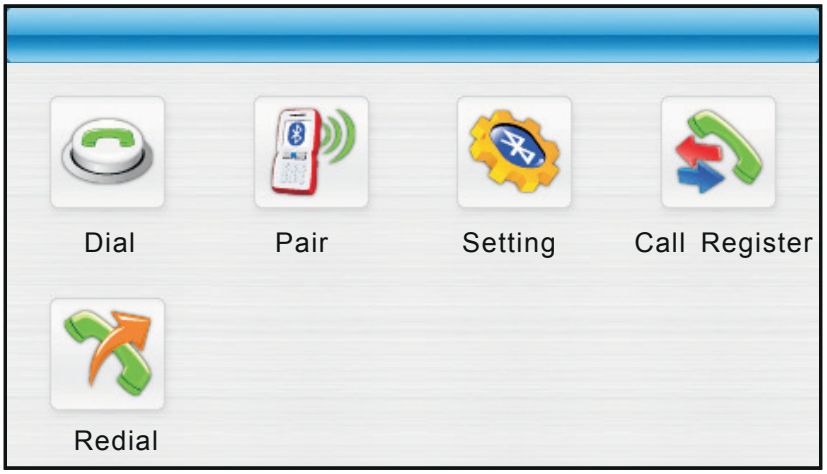

⦿ Dial Keypad

On the Bluetooth function interface, click the Dial icon to enter the Dial Keypad:

At this time, click the number keypad to enter the telephone number to be dialed, and then click the Dial button at the right lower corner to dial the number. Click to return to the upper-level function.

Function & Operation

After the Dial button is clicked, the mobile phone enters the call state. The screen display is shown in the following diagram:

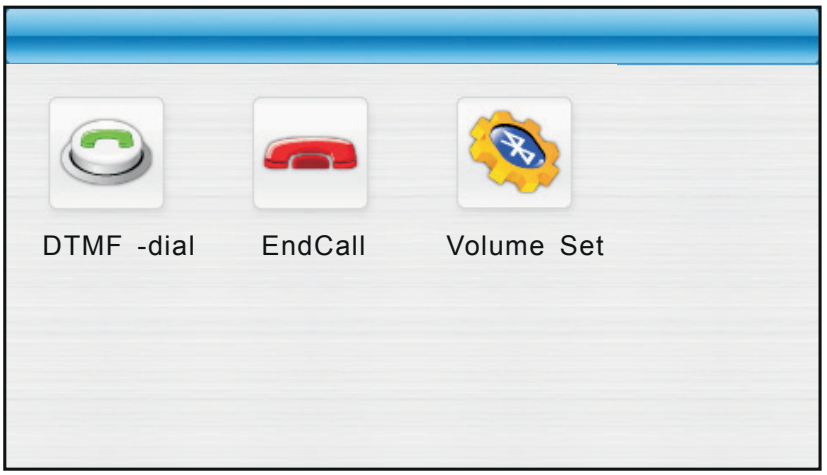

During the call, click "DTMF-dial" to open dial keyboard then you can enter some numbers when necessary during your call. Click the "EndCall" button to end the call.

⦿ View Call Record of Mobile Phone

On the Bluetooth function interface, click the Call Register icon to enter the Call Record. To read the information of the mobile phone with this function, it may take some time. The screen display is shown in the following diagram:

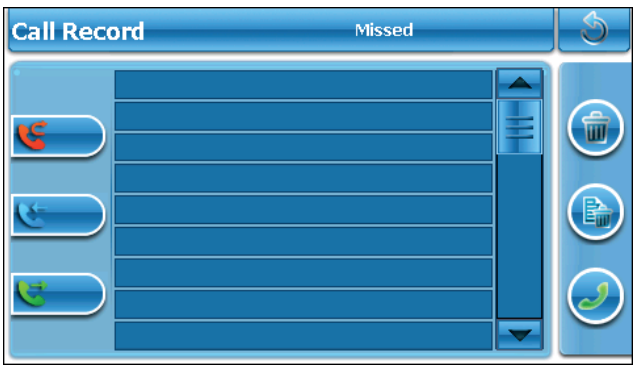

At this time, click the three relevant buttons on the left of the screen to view incoming calls, received calls and dialed calls. Select an option, and click the Dial button in the lower part of the screen to dial the selected number.

Services

Troubleshooting

No.	Fault	Possible Cause	Solutions
	No power on	Battery drained (The screen has no further display after a blink when pressing power on button.)	Please refer to the description of battery charging in this manual, only use the enclosed charger to charge the device.
	Dead Unit	The start interface stays on the screen for long time without changing.	Take out the battery, then put it back, start the device again.
		No display of the screen, or display on screen is frozen as any button is pressed.	Press and hold the power on button for 5 seconds, then release it to power on.
			Take out the battery, then put it back, start the device again.
	Error in upgrade	Dead or frozen during upgrade, display on the screen is frozen and no button works.	This fault can only be fixed by the manufacturer. Please return for repair.
	Impossible to recharge	During charging, the green LED indicator of the device has no light or no charging sign displayed on the screen.	If the charger is connected properly and powered.
			Charger is damaged.
			Battery is damaged or full charged.
			It is normal when the green LED is lit on but the charging sign is not on the screen at the same time during charging.